

Pivot Auto Clean (P.A.C.)

Installation Instructions

NOTE: PLEASE FOLLOW ALL INSTALLATION STEPS TO ENSURE PROPER OPERATION.


Please inventory the contents of this box to ensure the following items: P.A.C. main body, 2 galvanized fittings and two quick push fittings, one black nylon tubing and one #16 Fan spray nozzle. Some end caps may require a 2" npt nipple which is not included.

What you need for installation

Pipe thread tape, 2 pipe wrenches, and a small set of channel locks or crescent wrench



P.A.C Assembly

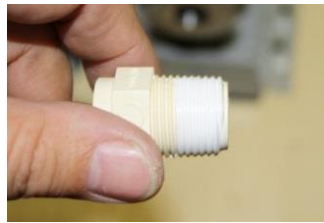

Step 1. Use thread tape on all fittings.



Step 2. Screw John Guest Fittings into P.A.C.

Step 3. Push black tubing into the John Guest fittings. ***BE SURE TO PUSH WITH SOME FORCE TO ENSURE SOLID CONNECTION BETWEEN JOHN GUEST FITTING AND BLACK TUBING!**



Step 4. For use on pivots without End Guns, assemble spray nozzle accessory. Utilize pipe tape on all fittings.



P.A.C Installation for Pivot without End Guns

Step 1. Remove Pivot end cap or plug.


Step 2. *Run pivot with water ON and flush pivot until water coming out the end of the pivot is clean.*

Step 3. Turn pivot off

Step 4. Install P.A.C in place of cap or plug.

When screwing on P.A.C, be sure to finish tightening to where P.A.C is level.

P.A.C. is now ready for automatic operation!

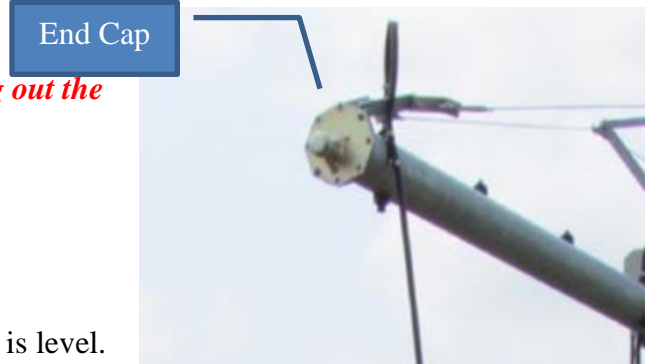

P.A.C Installation for Pivot with End Guns

Step 1. Remove End Gun

Step 2. *Run pivot with water ON and flush pivot until water coming out the end of the pivot is clean.*

Step 3. Turn pivot off

Step 4. Install P.A.C ahead of End Gun. When screwing on P.A.C be sure to finish tightening to where P.A.C is level.

Step 5. Once P.A.C is installed it is time to reattach your End Gun.

P.A.C. is now ready for automatic operation!



PLEASE DO NOT HESITATE TO CONTACT US IF YOU HAVE ANY QUESTION!

www.dripwell.com.....800-676-3747